



Model: HVW-580 T5

INDUSTRIAL RANGE Open Skid Powered by VOLVO





WATER-COOLED



THREE PHASE



50 HZ




97/68/EC (STAGE II)



DIESEL

Generating Rates

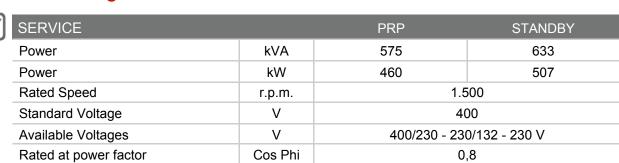



HIMOINSA Company with quality certification ISO 9001 HIMOINSA gensets are compliant with EC mark which includes the following directives:

- EN ISO 13857:2008 Machinery safety.
- 2006/95/EC Low voltage.
 89/336/EEC Electromagnetic compatibility.
- 2000/14/EC Sound Power level. Noise emissions outdoor equipment. (amended by 2005/88/EC)
 97/68/EC Emissions of gaseous and particulate pollutants. (amended by 2002/88/EC & 2004/26/EC)

Ambient conditions of reference: 1000 mbar, 25°C, 30% relative humidity. Power according to ISO 3046 normative.

P.R.P. Prime Power - ISO 8528: prime power is the maximum power available during a variable power sequence, which may be run for an unlimited number of hours per year, between stated maintenance intervals. The permissible average power output during a 24 hours period shall not exceed 80% of the prime power. 10% overload available for

Standby Power (ISO 3046 Fuel Stop power): power available for use at variable loads for limited annual time (500h), within the following limits of maximum operating time: 100% load 25h per year – 90% load 200h per year. No overload available. Applicable in case of failure of the main in areas of reliable electrical network.

HIMOINSA HEADQUARTERS:

Tel.+34 968 19 11 28 Fax +34 968 19 12 17 Fax +34 968 19 04 20 info@himoinsa.com www.himoinsa.com

Manufacture facilities: SPAIN • FRANCE • INDIA • CHINA • USA

Subsidiaries: | ITALY | PORTUGAL | POLAND | GERMANY | SINGAPORE | UAE | MEXICO | PANAMÁ | ARGENTINA







NDUSTRIAL RANGE Open Skid Powered by VOLVO

Engine Specifications 1.500 r.p.m.

ENGINE		PRP	STANDBY	
Rated Output	Kw	485	536	
Manufacturer		VOLVO		
Model		TAD 1642GE		
Engine Type		Diesel 4 strockes-cycle		
Injection Type		Dire	ect	
Aspiration Type		Turbocharged a	and aftercooled	
Ciylinders Arrangement		6 -	L	
Bore and Stroke	mm	144 x	165	
Displacement	L	16,	12	
Cooling System		cool	ant	
Engine Specifications		VDS-2, ACEA:E	3, E5; API CG-4	
Compression Ratio		16,5:1		
Fuel Comsumption Stand By	l/h	127,14		
Fuel Comsumption 100% PRP	l/h	113,35		
Fuel Comsumption 75 % PRP	l/h	83,32		
Fuel Comsumption 50 % PRP	l/h	55,83		
Fuel Comsumption 25 % PRP	l/h	30,03		
Lube Oil comsumption full load	g/kwh	0,185		
Total Oil Capacity	L	42		
Total Coolant Capacity	L	60		
Governor	Туре	Elect	rical	
Air Filter	Туре	Dr	ту	
Inner diameter exhaust pipe	mm	160		







NDUSTRIAL RANGE Open Skid Powered by VOLVO

Generator

Generator		
Poles	Num	4
Winding Conections (standard)		Star-serie
Frame Mounting		S-1 14"
Insulation	Class	H class
Enclosure (according IEC-34-5)		IP23
Exciter System		self-excited, brushless
Voltage Regulator		A.V.R. (Electronic)
Steady Voltage Precision		± 1%
Bearing		Single bearing
Coupling		Flexible disc
Coating type		Standar (Vacuum impregnation)





INDUSTRIAL RANGE Open Skid Powered by VOLVO

Control Panel Models







CEC7 CEA7 CEM7

FUNCIONALITY	PANEL MODEL	CONTROLLER MODE
Auto-start	M5	CEM7
Automatic Control Panel Without Mains Control	AS5	CEM7**
Automatic Control Panel With Mains Control (customer change over contactors)	AS5	CEA7
Automatic Control Panel With Mains Control (Himoinsa change over contactor with display)	AS5XCC2	CEM7+CEC7
Automatic Mains Failure (wall mounted panel)	AC5	CEA7

(**) Pre-heating resistance in the Genset and Battery charger in the control panel included.

Option available: Auto-start control panel without circuit breaker

General Description

CEM 7

The CEM7 controller unit is a device able to control de operation, monitoring and protection of a generating set. The controller unit consists of 2 different modules:

1. The VISUALIZATION module 2. The MEASUREMENTS module VISUALIZATION MODULE Provides information about the status of the device and, at the same time, allows the user to interact with it. It consists on a backlit display and various LEDs for monitoring the status of the controller and buttons that allow the user to control, program and configure the functions of the unit. MEASUREMENTS MODULE Controls and monitors the control board. It is located in the rear part of the panel, in order to reduce the wiring and to avoid electromagnetic disturbances. Every signal, sensor and actuator is connected to this module

The connexion between the visualization module and the measurements module is made with a CAN communication bus. This feature allows the intercommunion of other modules to the main controller with a scalability warranty.

CEC 7

The CEC7 controller unit is a net sings supervision equipment, and control and supply supplier through generating set. The controlle unit consists of 2

different modules: 1.The VISUALIZATION module

2. The MEASUREMENTS module VISUALIZATION MODULE

The visualization module provides information about the status of the device and, at the same time, allows the user to interact with it. With this visualization module the user is able to control, program and configure the functions of the unit. It consists on a backlight display and various LEDs for monitoring the status of the controller and buttons that allow the user to control, program and configure the functions of

MEASUREMENTS MODULE
The measurements module controls and monitors the control board. It is located in the rear part of the panel, in order to reduce the wiring and to avoid electromagnetic disturbances.

Every signal, sensor and actuator is connected to this module
The connection between the measure module

and visualization mode is made by means of a CAN BUS (Communication Bus). This produces an interconnection

between additional modules which guarantees the proper working of the controller.

CEA 7

CEA7 controller is a supervision equipment for mains signal and also a supervision and electrical supply through the genset. This controller is composed by 2 different modules: 1. VISUALIZATION module

2.MEASUREMENTS module VISUALIZATION MODULE

The visualization module provides information about the status of the

and, at the same time, allows the user to interact with it. With this visualization module the user is able to control, program

and configure the functions of the unit. MEASUREMENTS MODULE

The measurements module controls and monitors the control board. It is located inthe rear part of the panel, in order to

the wiring and to avoid electromagnetic disturbances. Every signal, sensor and actuator is connected to this module. Connection between the measure module

and visualization mode is made by

means of a CAN BUS (Communication Bus). This produces an interconnection between additional

modules which guarantees the proper working of the controller.







INDUSTRIAL RANGE Open Skid Powered by VOLVO

Control & Power Panel

- 1. CM Control Panel.
- 2. CP Power Panel.
- 3. On/Off Switch..
- 4. Emergency Stop.
- 5. Main Line Circuit Breaker for overload protection.
- 6. Main bus /hardwire connection panel with safety protection.

CE-7 Auto-start multilingual control panel

- 1. Voltage between each Phase & Neutral
- 2. Voltage between Phases
- 3. Current (amps) on each Phase
- 4. Frequency
- 5. Active, Aparent & Reactive Power
- 6. Power Factor
- 7. Instant Power (KwH) and Accumulative power)

- 8. Fuel level
- 9. Oil pressure, coolant temperature, oil temperature
- 10. Battery voltage, battery charging alternator voltage
- 11. Engine Speed
- 12. Hours running
- 13. Multilingual (Spanish, English, French, Italian, Portuguese, Polish, German, Chinesse, Russian, Swedish, Norwegian)

Engine Alarms

- 1. High coolant temperature.
- 2. Low oil pressure.
- 3. Battery charge alternator
- 4. Start failure.
- 5. Low water level.
- 6. Fuel storage.
- 7. Overspeed.
- 8. Underspeed.9. Low battery voltage.
- 10. High coolant temperature by sensor.
- 11. Low oil pressure by sensor.
- 12. Low fuel level by sensor.
- 13. Unexpected shutdown.
- 14. Stop failure.
- 15. Low engine temperature.
- 16. Genset voltage drops.
- 17. Emergency stop.

Genset Alarms

- 1. Over-load
- 2. Unbalanced voltage
- 3. Over voltage
- 4. Under voltage
- 5. Over frequency
- 6. Under frequency
- 7. Over load
- 8. Short-circuit
- 9. Inverse Power
- 10. Asymmetry among phases
- 11. Genset contactor Failure

Mains Alarms

- 1. Maximum Mains Voltage.
- 2. Minimum Mains Voltage.
- 3. Maximum Mains Frequency.
- 4. Minimum Mains Frequency.
- 5. Mains phase sequence failure.6. Mains power failure.
- 7. Mains contactor switching failure.

Programmable Alarms: There are 5 programmable alarms on text and action that could be associated to any engine alarms and showed on the auxiliary led 1 and 2 of the display







INDUSTRIAL RANGE Open Skid Powered by VOLVO

Controllers Features

		CEM 7	CEC 7	CEA 7	CEM7 + CEC7
	GENERATOR READINGS				
			•	•	
	Voltage among phases Voltage among phases and neutral	•	•	•	•
	Amperage	•	•	•	•
	Frequency	•	•	•	•
	Apparent power (kVA)	•	•	•	•
	Active power (kW)		•	•	•
	Reactive power (kVAr)	•	•	•	•
	Power factor	•	•	•	•
	1 OWE TACTO	•	-	-	
<u> </u>	MAINS READINGS				
₹	Voltage among phases	x	•	•	•
	Voltage among phase and neutral	x	•	•	•
	Amperage	X	•	•	•
	Frequency	X	•	•	•
	Aparent power	x	Х	•	•
	Active power	x	Х	•	•
	Reactive power	X	X	•	•
	Power factor	x	X	•	•
	ENGINE READINGS				
	Coolant temperature	•	Х	•	•
שש	Oil pressure	•	Х	•	•
	Fuel level (%)	•	Х	•	•
	Battery voltage	•	Х	•	•
	R.P.M.	•	Х	•	•
	Battery charge alternator voltage	•	Х	•	•
	ENGINE PROTECTIONS				
	High water temperature	•	Х	•	•
_	High coolant temperature by sensor	•	X	•	•
<u></u>	Low engine temperature by sensor	•	Х	•	•
	Low oil pressure	•	X	•	•
	Low oil pressure by sensor	•	X	•	•
	Low coolent level				
		•	Х	•	•
	Unexpected shutdown	•	X X	•	•
	Unexpected shutdown Fuel storage				
		•	Х	•	•
	Fuel storage	•	X X	•	•
	Fuel storage Fuel storage by sensor	•	x x x	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure	•	x x x x x	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed	•	x x x x	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed	•	x x x x x x x	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure	•	x x x x x x x x x	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed	•	x x x x x x x	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop	•	x x x x x x x x x	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop ALTERNATOR PROTECTIONS	•	x x x x x x x x	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop ALTERNATOR PROTECTIONS High frequency	•	X X X X X X X X	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop ALTERNATOR PROTECTIONS High frequency Low frequency		X X X X X X X X	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop ALTERNATOR PROTECTIONS High frequency Low frequency High voltage		X X X X X X X X	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop ALTERNATOR PROTECTIONS High frequency Low frequency High voltage Low voltage		X X X X X X X X	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop ALTERNATOR PROTECTIONS High frequency Low frequency High voltage Low voltage Short-circuit		X X X X X X X X X	•	
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop ALTERNATOR PROTECTIONS High frequency Low frequency High voltage Short-circuit Asymmetry among phases		X X X X X X X X X X	•	•
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop ALTERNATOR PROTECTIONS High frequency Low frequency High voltage Low voltage Short-circuit Asymmetry among phases Incorrect phase sequence		X X X X X X X X X X X	•	
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop ALTERNATOR PROTECTIONS High frequency Low frequency High voltage Low voltage Short-circuit Asymmetry among phases Incorrect phase sequence Inverse power		X X X X X X X X X X X X X X X X X X X	•	· · · · · · · · · · · · · · · · · · ·
	Fuel storage Fuel storage by sensor Stop failure Battery voltage failure Battery charge alternator failure Overspeed Underspeed Start failure Emergency Stop ALTERNATOR PROTECTIONS High frequency Low frequency High voltage Low voltage Short-circuit Asymmetry among phases Incorrect phase sequence		X X X X X X X X X X X	•	•



x Not included

NOTE: All protections are programmable to make "warning" or "stop with cooling time" or "without"






Optional



INDUSTRIAL RANGE Open Skid Powered by VOLVO

Controllers Features

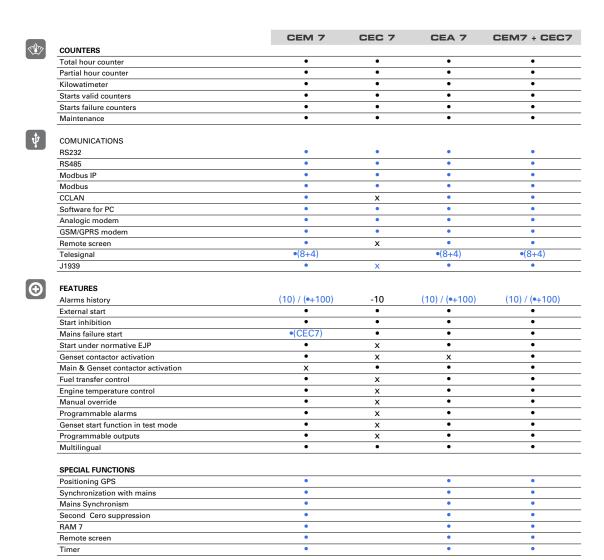

 Standard CEC7: available when the controller CEC7 is incorparted to the installation

x Not included
Ontional MPS 5.0: available application when the module MPS 5. has been incorporated to the panel. Optional

Note: AS5 + CC2 configuration, will have all CEM7 funcionality plus CEC7 mains readings.







INDUSTRIAL RANGE Open Skid Powered by VOLVO

Generating Sets Standard and Optional Features

Engine

- · Diesel engine
- · 4 strokes-cycle
- · Water-cooled
- · 24V Electrical system
- · Radiator with blowing fan
- · Tropicalised radiator 45°
- · water separator decanting filter with alarm
- · Electronic governor
- · Sender WT
- · Senders OP
- · Low water level sensor
- · Dry air cleaner (medium duty)
- · Hot components and radiator guards
- · Mobile components guards

Alternator

- · Self-excited and Self-regulated
- · IP23 protection degree
- · Insulation H class

— Electrical system

- · Control and power electric panel, with measurements devices and controller (according to necessity and configuration)
- · 4 poles circuit breaker
- · Earth leakage protection adjustable (time & sensibility) standard in M5 and AS5 configuration with MCCB
- · Battery charger (standard on automatic control panels)
- · Pre-heating resistance (standard on automatic control panels) / water jacket heater
- · Battery charge alternator with ground connection
- · Starting battery/ies installed and connected to the engine (supports included)
- \cdot Ground connection electrical installation with connection ready for ground pike (not supplied)

Optional: · Battery disconnector

Open set version

- · Emergency stop button
- · Oil sump extraction kit
- · Steel made chassis
- · Antivibration shock absorber
- · Chassis with integrated fuel tank
- · Fuel level sensor
- · Drain cap fuel tank
- · Steel made residential silencer -15db(A) attenuation

Optional: · Fuel transfer pump

· Steel made residential silencer -35db(A) attenuation.







INDUSTRIAL RANGE Open Skid Powered by VOLVO

Application Data

Exhaust System		
Maximum exhaust temperature 100% Stand By	°C	494
Exhaust Gas Flow 100% Stand By	m3/min	100,7
Maximum allowed back pressure	kPa	10
Heat evacuated through exhaut pipe	KCal/Kwh	683,93

Air Inlet System		
Intake Air Flow 100% Stand By	m3/h	2436
Cooling Air Flow 100% Stand By	m3/s	9,26
Alternator fan air flow	m3/s	1,035

Starting System		
Starting Motor	Kw	7
Starting Motor	CV	9,52
Auxiliary Voltage	Vcc	24
Starting current	Peak	700
Starting current	Intensity	280

Fuel System		
Fuel Oil Specifications		Diesel
Fuel Tank	L	740








NDUSTRIAL RANGE Open Skid Powered by VOLVO

Dimensions

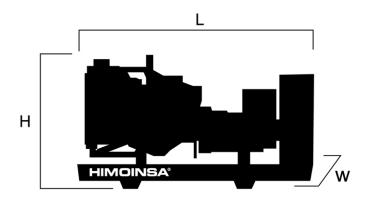

Weight and Dimensions		
(L) Length	mm	3.600
(H) Height	mm	2.114
(W) Width	mm	1.460
Shipping Volume seaworthy (standard suplier)	m3	11,11
^(*) Dry weight	Kg	4.343
Fuel tank capacity	L.	740
Autonomy	Hours	9

^{(*) (}with standard accesories)

STANDARD VERSION

Himoinsa reserve the right of modify any characteristic without prior notice.

Weights and dimensions based on products standar and dry / illustrations may include optional equipment. Technical data here described correspond with the available information at the moment of printing. Industrial design under patent.

Local Distritutor







CONTROL PANEL MODEL

Model: HVW-580 T5
INDUSTRIAL RANGE


DUSTRIAL RANGE Open Skid Powered by VOLVO

<u>—</u> М5

Digital manual auto-start control panel and thermal magnetic protection (according to voltage and phase) and differential relay. CEM7



— AS5

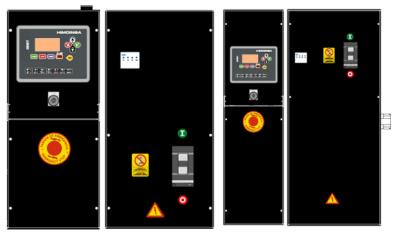

CC2

Himoinsa External ATS WiITH visualization display. CEC7











CONTROL PANEL MODEL

Model: HVW-580 T5

INDUSTRIAL RANGE Open Skid Powered by VOLVO

- AS5 + CC2

Automatic with mains control and ATS with visualization. The visualization will be in the genset and in the ATS box. CEM7+CEC7 $\,$



— AC5

Automatic Mains Failure control panel. Wall mounted Automatic control panel including transfer switch with thermal magnetic protection (according to voltage and phase). CEA7









Model: HVW-580 T5

INDUSTRIAL RANGE Open Skid Powered by VOLVO

PDF Summary

Created: 12/05/2011 14:15

Author : Himoinsa Number of pages : 13

Report Type: Data Sheet - Industrial range Generated by: HIMOINSA Engineering Dept.

Page 1. Genset data

Page 2. Engine Specifications

Page 3. Generator Specifications

Page 4. Control Panels models + General Description

Page 5. Control box and power, CE7 Panel, Alarms

Page 6. Controller features (I)

Page 7. Controller features (II)

Page 8. Generator Features & Options

Page 9. Installation Data

Page 10. Dimensions

Page 11. Control Panel Model

Page 12. Control Panel Model

Page 13. PDF Summary (ID454E383237353131)







